

# **SYSTEM SOFTWARE**



**NOTICE:** This manual is subject to change without notice. Midway Games West Inc. reserves the right to make improvements in equipment function, design, or components as progress in engineering or manufacturing methods may warrant.

### **GAME OPERATION**

#### **PLAYER CONTROLS**

# Start/Select and "Power Shot"

### **Change Camera**

Choose between a behind-the-player view or a bird's-eye view.

After currency is accepted this button starts a 1-, 2-, 3-, or 4-player game. During play, this button can increase a club's maximum distance, provided the joystick is released at precisely the right moment. Players earn one Power Shot per three holes, but can earn more after 10 QuickShots.

# Keypad Pod Assembly

Lets players enter their PINs as well as allow operators to navigate the system menus.

# **Select Club**

Cycles through your selection of clubs.

During Extreme-Mode, buttons add top- or backspin.



down

left

Left button swivels player counter-clockwise around ball (from an overhead view), changing lateral aim to the right. Right button changes lateral aim to the left. In Extreme Mode, buttons move an in-flight ball left or right.


up

right

#### **Joystick Assembly**

Pulling back on the joystick winds your club backwards. Pulling to the left aims the swing a bit to the right; pulling to the right aims the swing a bit to the left. The joystick assembly is designed to withstand numerous sudden snaps back to neutral position.

#### **OPERATOR CONTROLS**

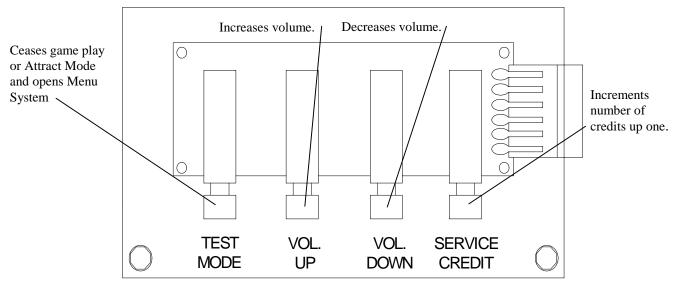

TYPICAL TEST SWITCH BRACKET PUSHBUTTON LOCATIONS

# Menu System

Follow instructions at the bottom of each menu screen to access more menus and change settings. The current date and time are shown.

ATLANTIS TESTS

Day Date Year Time

ADJUST VOLUME

**STATISTICS** 

GAME OPTIONS COIN OPTIONS TOURNAMENT OPTIONS

SET DATE/TIME

**TESTS** 

**EXIT TO GAME** 

To select test, use +/-/LEFT/RIGHT To run test, Press START or TEST

EPROM: X.XX Sept 7 1999 XX:XX:XX GUTS: X.XX Aug 30 1999 XX:XX:XX Game: Sep 2 1999 XX:XX:XX Serial #: XXXXXXX

# **ADJUST VOLUME**

Raise or lower the volume during the game and during Attract Mode. Set the game volume first, then decide if Attract Mode will be as loud as the game (100%), or less. Attract Mode cannot be louder than game volume. You can also adjust volume with the control switches.

Game	
Attract (75% of Game)	

To ADJUST volume, use +/-/LEFT/RIGHT
To SELECT which volume, Press START or TEST
To RESTORE old settings, press and hold START or TEST
To SAVE settings and exit, Press VIEW or CREDIT

# STATISTICS

View game play and coin statistics.

Coin 1 (Left)	: 0
Coin 2 (Right)	: 0
Coin 3	: 0
Coin 4	: 0
Bill Value	: 0
Service Credits	: 0
Idle Mins	: 0
1 Player Mins	: 0
2 Player Mins	: 0
3 Player Mins	: 0
4 Player Mins	: 0
New Games	: 0
Cont Games	: 0
Total Games	: 0
1-Player Games	: 0
2-Player Games	: 0
3-Player Games	: 0
4-Player Games	: 0
Error Count	: 0
Total Coins:	: 0
Avg TIME/COIN	: 0
Percentage Play	: 0

To clear these counters,

Hold START or TEST and press VIEW or CREDIT For more stats, press VIEW or CREDIT

# **STATISTICS**

# **HISTOGRAMS**

New Game Times (in seconds)

Course Selected

Golfer Selected

Holes/game total

Holes/game 1 player

Holes/game 2 player

Holes/game 3 player

Holes/game 4 player

Players per game

Game Type

QuickShot percent

Power Shot percent

Power Shot usage

Navigated shot percent

**CLEAR ALL HISTOGRAMS** 

To select Histogram, Use +/-/LEFT/RIGHT To show Histogram, Press START or TEST To return to menu, Press VIEW or CREDIT

#### **GAME OPTIONS**

Reset High Scores After Reboot (One Time Effect) No

Conservative Mode Off

To change settings, use +/-/LEFT/RIGHT
To RESTORE old settings, Press START or TEST
To SAVE settings and exit, Press VIEW or CREDIT

#### **COIN OPTIONS**

# **PRICING OPTIONS**

Free Play:

No (or Yes)

Start game cost

1 Coin (1-12 Coins)

Continue Game Cost

1 Coin (1-12 Coins)

Bonus for quantity buy-in None

To change settings, use +/-/LEFT/RIGHT
To RESTORE old settings, Press START or TEST
To SAVE settings and exit, Press VIEW or CREDIT

#### **COIN OPTIONS**

#### **MECH SETUP**

Activate mech to test. Current Status

Mech 1 Mech 2 Mech 3 Mech 4 x4 Bill Service

Each Mech 1 Pulse Worth:

1 Coin (up to 60 coins)

Each Mech 2 Pulse Worth:

1 Coin (up to 60 coins)

Each Mech 3 Pulse Worth:

1 Coin (up to 60 coins)

Each Mech 4 Pulse Worth:

1 Coin (up to 60 coins)

Each Bill Pulse Worth:

1 Coin (up to 60 coins)

Stats and Counters Count:

Coins (or pulses)

To change settings, use +/-/LEFT/RIGHT
To RESTORE old settings, Press START or TEST
To SAVE settings and exit, Press VIEW or CREDIT

#### **TOURNAMENT OPTIONS**

Dialup System Setup

**Dialup Diagnostics** 

Dialup Statistics.

#### **SET DATE/TIME**

Date: Day Month Date, YEAR

Time: 10:14:41


Time Zone: (Not defined)

Time Zone Uses Daylight Savings Time: No

To RESTORE old setting, Press START or TEST
To set digit, use +/-/LEFT/RIGHT or keypad
To SAVE setting and exit, Press VIEW or CREDIT

# **TESTS**

#### **CONTROLS TEST**

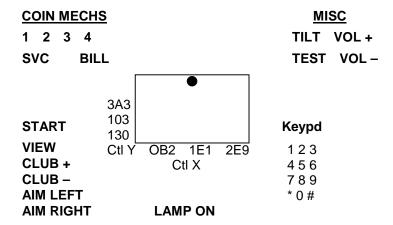

GRN=ok RED= Sw ON. YEL=Sw maybe.
To activate LAMP, press START
To reset pot limits, Press and hold START
To activate coin counter, Press TILT Switch.
To return to menu, Press and hold VIEW or CREDIT

TESTS	
MONITOR TESTS	
COLOR BARS	

Shows horizontal bars of red, green, blue, and white.

To cycle format, press START or TEST to return To return to menu, press VIEW or CREDIT

TESTS
MONITOR TESTS
CONVERGENCE

Shows grid with dots in the center of each box. You can change the color of the boxes and dots.

To change color, press START or TEST to return To return to menu, press VIEW or CREDIT

TESTS	
MONITOR TESTS	
PURITY	

Fills the screen with red, green, blue, bright white, and white for brightness, 50% grey, grey, ones and black.

To change color, Press START or TEST To toggle text on/off, use +/-/LEFT/RIGHT To Return to menu, Press VIEW or CREDIT

# **TESTS**

# **SOUND TESTS**

# HARDWARE TEST

\*\*\* Testing Audio Hardware \*\*\*

Hardware Reset PASSED

I/O port test PASSED

DSP IDMA Test PASSED

Diag version 0.01

SDRC Revision 3

D/RAM 0 Test PASSED

D/RAM 1 Test PASSED

Bong Test: PASSED

Software Reset PASSED

DSP OS Version: 0.02

To return to menu, press VIEW or CREDIT

#### **TESTS**

# **SOUND TESTS**

### **SPEAKER TEST**

A voice alternates speaking the word "left" into the left speaker and "right" into the right speaker to test your stereo capability.

To return to menu, Press VIEW or CREDIT

Hard Drive Connected: Yes  Hard Drive Manufacturer_  Logical Sectors available: XXXXXXX  LBA MB/SEC  avg  min  max  Tests completed: 0  To return to menu, Press VIEW or CREDIT  TESTS  DISK TESTS				
DISK TESTS				
DISK TESTS  DRIVE READ TEST  Hard Drive Connected: Yes  Hard Drive Manufacturer_  Logical Sectors available: XXXXXXXX  LBA MB/SEC  avg  min  max  Fests completed: 0  To return to menu, Press VIEW or CREDIT				
Hard Drive Connected: Ye	S			
Hard Drive Manufacturer_				
Logical Sectors available: X	XXXXXXX			
LBA MB/SEC				
avg				
min				
max				
Tests completed: 0				
	To return to menu, Press VIEW or CREDIT			
TESTS				
DISK TESTS				
FILESYSTEM CHECK				
Total Files Used:	xxxx			
Passes Completed :	X			

To Return to menu, Press VIEW or CREDIT

XXX.X

Checking File:

# **TESTS**

#### **MEMORY TESTS**

#### **VIDEO MEMORY TESTS**

Bank 0:

Testing Bank 0 . . .

This test takes about 75 seconds. Please wait.

#### **TESTS**

# **MEMORY TESTS**

#### **ROM TEST**

**Boot EPROM PASSED** 

Expansion EPROM (U17) test master is NOT installed

To return to menu, Press VIEW or CREDIT

#### **TESTS**

# **UART TESTS**

UART 0 (IOASIC) TEST
UART 1 (XMODEM)TEST
UART 1 (XMODEM) RCV ONLY
UART 2 (RS485) TEST
UART 2 (RS485) RCV ONLY
UART 3 PCI MODEM DIAL
UART 3 PCI MODEM ANSWER

To select test, Use +/-/LEFT/RIGHT

To run test, Press START or TEST

To return to menu, Press VIEW or CREDIT

# **TESTS**

#### PRINTER PORT TEST

Printing Line:

Waiting for printer

To return to menu, Press VIEW or CREDIT

# **TESTS**

# **DIP SWITCHES TEST**

#### <u>U49</u>

- 1 OFF Run Game
- 2 OFF Normal
- 3 OFF Normal
- 4 OFF Normal
- 5 OFF Normal
- 6 OFF Normal
- 7 OFF Not Used
- 8 OFF Not Used

#### <u>U50</u>

- 1 OFF Not Used
- 2 OFF Not Used
- 3 OFF Not Used
- 4 OFF Not Used
- 5 OFF Not Used
- 6 OFF Not Used
- 7 OFF Not Used
- 8 OFF Not Used

To return to menu, Press VIEW or CREDIT

# **EXIT TO GAME**

# STANDARD PRICING TABLE

NAME	START	CONTINUE	CREDITS/COIN	COIN 1	COIN 2	COIN 3	COIN4	BILL
ANTILLES	2	2	1/25¢, 4/1G	.25¢	1G			
AUSTRALIA 1	2	2	1/3X20¢, 2/\$1.00	.20¢	\$1.00			
AUSTRALIA 2	2	2	1/5X20¢, 1/\$1.00	.20¢	\$1.00			
AUSTRIA 1	2	2	1/5Sch, 2/10Sch	5 Sch	10 Sch			
AUSTRIA 2	2	2	1/2X5Sch, 3/2X10Sch	5 Sch	10 Sch			
BELGIUM 1	2	2	1/20BF	20BF	20BF			
BELGIUM 2	2	2	3/20BF	20BF	20BF			
BELGIUM 3	2	2	2/20BF	20BF	20BF			
BELGIUM ECA	2	2	1/20BF	50BF	20BF	5BF		
CANADA 1	2	2	1/2 x 25¢, 3/\$1	25¢	25¢			
CANADA 2	2	2	1/2 x 25¢, 3/\$1	25¢	\$1.00			
CANADA 3	2	2	3 / \$1.00, 6 / \$2.00	\$1.00	\$2.00		40.00	
CANADA ECA	2	2	1 / 2 x 25¢, 3 / \$1	25¢		\$1.00	\$2.00	
DENMARK	2	2	3/5DKr, 7/10DKr	5DKr	10DKr			
FINLAND	2	2	1/1Fmk	1Fmk	5Fmk			
FRANCE 1	2	2	2/5Fr, 5/10Fr	5Fr	10Fr			
FRANCE 2	2 2	1	2/5Fr, 4/10Fr	5Fr 5Fr	10Fr 10Fr			
FRANCE 3	2		1/5Fr, 3/10Fr	5Fr				
FRANCE 4 FRANCE 5	2	1	1/5Fr, 2/10Fr 2/5Fr, 5/10Fr, 11/2 X 10Fr	5Fr 5Fr	10Fr 10Fr			
FRANCE 6	2	1	2/5Fr, 4/10Fr, 9/2 X 10Fr	5Fr	10Fr 10Fr			
FRANCE 7	2		1/5Fr, 3/10Fr, 7/2 X 10Fr	5Fr	10Fr 10Fr			
FRANCE 8	2	1	1/5Fr, 2/10Fr, 5/2 X 10Fr	5Fr	10F1			
FRANCE 9	2		1/3 X 1Fr, 2/5Fr	1Fr	5Fr			
FRANCE 10	2		1/3 X 1F1, 2/3F1 1/2 X 1Fr, 3/5Fr	1Fr	5Fr			
FRANCE 11	2		1/3 X 1Fr, 2/5Fr, 5/2 X 5Fr	1Fr	5Fr			
FRANCE 12	2	1	1/2 X 1Fr, 3/5Fr, 7/2 X 5Fr	1Fr	5Fr			
FRANCE ECA 1	1	1	2/5Fr, 5/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 2	1	1	2/5Fr, 4/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 3	1	l i	1/5Fr, 3/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 4	1	1	1/5Fr, 2/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 5	1	l i	2/5Fr, 5/10Fr, 11/2 X 10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 6	1	1 1	2/5Fr, 4/10Fr, 9/2 X 10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 7	1	1	1/5Fr, 3/10Fr, 7/2 X 10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 8	1	1 1	1/5Fr, 2/10Fr, 5/2 X 10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 9	1	1	1/3 X 1Fr, 2/5Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 10	1	1	1/2 X 1Fr, 3/5Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 11	1	1	1/3 X 1Fr, 2/5Fr, 5/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 12	1	1	1/2 X 1Fr, 3/5Fr, 7/10Fr	1Fr	5Fr	10Fr	20Fr	
FRANCE ECA 13	1	1	1/10Fr, 2/20Fr, 4/30Fr	1Fr	5Fr	10Fr	20Fr	
FREE PLAY				None	None	None	None	None
GERMANY 1	2	2	1/1DM, 6/5DM	1DM	5DM			
GERMANY 2	2	1	1/1DM, 7/5DM	1DM	5DM			
GERMANY 3	2	1	1/1DM, 8/5DM	1DM	5DM			
GERMANY 4	2	1	1/1DM, 5/5DM	1DM	5DM			
GERMANY 5	2	1	1/1DM, 6/5DM	1DM	5DM			
GERMANY ECA 1	2	2	1/1DM, 2/2DM, 6/5DM	1DM	2DM	5DM		
GERMANY ECA 2	2	1	1/1DM, 2/2DM, 6/5DM	1DM	2DM	5DM		
GERMANY ECA 3	1	1	1/1DM, 2/2DM, 6/5DM	1DM	2DM	5DM		
HUNGARY	2	2	1/2X10Ft, 3/2X20Ft	10Ft	20Ft			
ITALY	2	2	1/500Llt	500Llt	500Llt			
JAPAN 1	2	2	1/100Yen	100	100			
JAPAN 2	2	2	2/100Yen	100	100			
JAPAN 3	1	1	1/100Yen	100	100			
JAPAN 4	1	1	2/100Yen	100	100			
JAPAN 5	1	1	4/100Yen	100	100			
JAPAN 6	1	1	1/2X100Yen	100	100			
NETHERLANDS	2	2	1/1HFI, 3/2.5HFI	1HFI	2.5HFI			
NEW ZEALAND 1	1	1	1/\$1	\$1	\$2			
NEW ZEALAND 2	1	1	2/\$1	\$1	\$2			
NORWAY	2	2	3/5NKr, 6/10NKr	5NKr	10NKr			
SPAIN 1	2	2	1/100Pta, 6/500Pta	100Pta	500Pta			
SPAIN 2	2	2	1/100Pta, 5/500Pta	100Pta	500Pta			ļ
SWEDEN	2	2	1/3X1SKr, 2/5SKr	1SKr	5SKr			
SWITZERLAND 1	2	2	1/1SFr, 6/5SFr	1SFr	5SFr			
SWITZERLAND 2	2	2	1/1SFr, 7/5SFr	1SFr	5SFr			
SWITZERLAND 3	2	2	1/1SFr, 8/5SFr	1SFr	5SFr	Ì	l	1

(Table continues on next page)

# STANDARD PRICING TABLE, continued

NAME	START	CONTINUE	CREDITS/COIN	COIN 1	COIN 2	COIN 3	COIN4	BILL
UK ECA 1	1	1	1/50p, 3/£1.00	£1.00	50p	20p	10p	£2.00
UK ECA 2	1	1	1/50p, 2/£1.00	£1.00	50p	20p	10p	£2.00
UK ECA 3	1	1	1/30p, 2/50p, 5/£1.00	£1.00	50p	20p	10p	£2.00
UK 4	1	1	1/50p, 3/£1.00	£1.00	50p			
UK 5	1	1	1/50p, 2/£1.00	£1.00	50p			
UK ECA 6	1	1	1/30p, 2/50p, 4/£1.00	£1.00	50p	20p	10p	£2.00
UK ECA 7	1	1	3/£1.00	£1.00	50p	20p	10p	£2.00
UK ECA 8	1	1	1/50p, 2/£1.00, 4/£2.00	£1.00	50p	20p	10p	£2.00
USA1	2	2	1/25¢	25¢	25¢			\$1.00
USA2	2	1	1/25¢	25¢	25¢			\$1.00
USA3	1	1	1/25¢	25¢	25¢			\$1.00
USA4	1	1	1/50¢, 3/\$1.00	25¢	25¢			\$1.00
USA5	2	1	1/50¢, 4/\$1.00	25¢	25¢			\$1.00
USA6	1	1	1/50¢	25¢	25¢			\$1.00
USA7	1	1	1/50¢, 3/\$1.00	25¢	25¢			\$1.00
USA8	2	2	1/50¢, 4/\$1.00	25¢	25¢			\$1.00
USA9	3	2	1/25¢, 4/\$1.00	25¢	25¢			\$1.00
USA10	3	3	1/25¢, 4/\$1.00	25¢	25¢			\$1.00
USA11	4	2	1/25¢, 4/\$1.00	25¢	25¢			\$1.00
USA12	4	3	1/25¢, 4/\$1.00	25¢	25¢			\$1.00
USA13	4	4	1/25¢, 4/\$1.00	25¢	25¢			\$1.00
USA ECA	3	3	1/25¢, 4/\$1.00	\$1.00	25¢	10¢	05¢	\$1.00