




www.bullshooter.com|www.arachnidinc.com | 800.435.8319 815.654.0212 | Fax 815.654.0447

## Hinged Bezel Kit for the Galaxy II (Kit # 42402)


This kit replaces an old style bezel with the newer hinged bezel.

Note: This kit may only be used to update Galaxy II's above serial number 1992. The formed edge on the bezel needs a groove on the Upper Cabinet to fit properly. The groove only appeared on later versions of the Galaxy II.

## **Parts List**

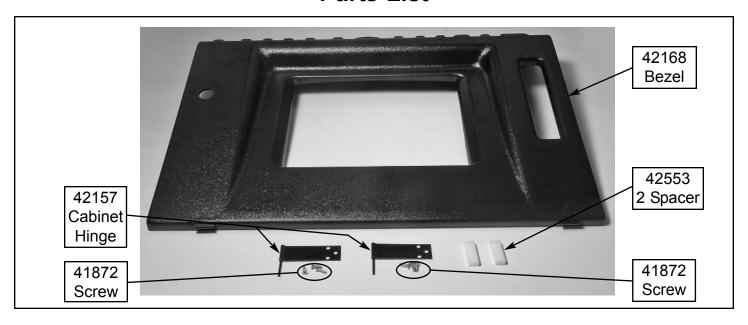



- 1. Unplug the Galaxy II from the wall.
- 2. Unplug the wire harness, monitor cable, network lines and phone line from the main board.
- 3. Remove the target door of the Galaxy II.
- 4. Remove the old bezel.
- 5. Remove the monitor.
- 6. Remove the four nuts and bolts securing the upper cabinet to the lower cabinet.

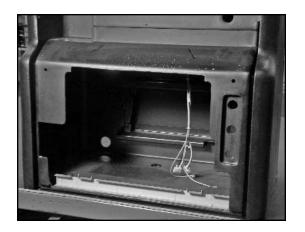


- 7. On a flat surface, lay the upper cabinet on its back.
- 8. Place a plastic spacer in the groove on each side. These are used to set the depth of the bezel.




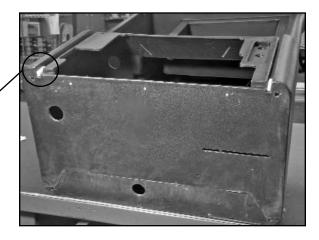


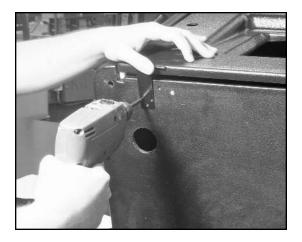

- 9. Lay the new bezel in place on the upper cabinet.
- 10. Slide the cabinet hinge onto the bezel hinge, making sure both sets are properly seated.
- 11. Drill three 3/32" (.094") holes into the bottom of the upper cabinet using the cabinet side hinge leaves as templates.

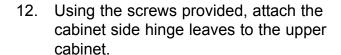

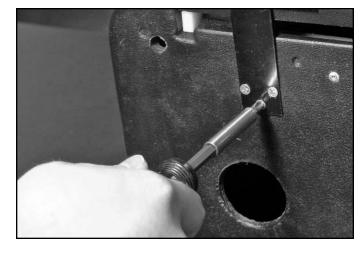

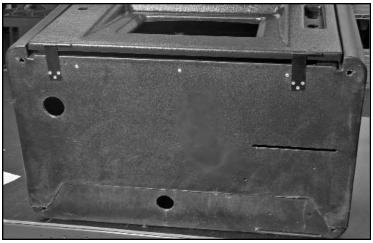

- 13. Remove the plastic spacers.
- 14. Reassemble the Galaxy II.